


Technical Specifications

XT-800 SPECIFICATIONS	
VGA Data	
Format	RGBHV, RGB, YUV, Y/C, CVBS
Resolution	Up to 1900 x 1200 VGA, SVGA, XGA, SXGA)
Connector type	HD 15 socket
Audio	
Signal Type	Stereo unbalanced
Connector	3.5mm jack socket
Power	
Requirements	5VDC @.5A
Connector	2.1mm DC jack (center +ve)
Physical	
Dimensions	22 x 11.8 x 2.7cm (3.1with pegs)
Weight	3.5 lbs



Sending an RS232 command to remote monitor

In order to send a command to a remote monitor, you will need to use The following query at 9600 baud rate;

<CR>//M1<CR>

- After sending this query, any command sent from the PC will go directly to monitor 1
- To send a command to monitor 2 replace "M1" with "M2" etc...
- To send the same command to all monitors (but only monitor 1 will answer) Use the following command;
<CR>//M0<CR>

* <CR> = Carriage return

© Copyright 2007 Smart-AVI, All Rights Reserved

Notice

The information contained in this document is subject to change without notice. Smart-AVI makes no warranty of any kind with regard to this material, including but not limited to, implied warranties of merchantability and fitness for any particular purpose.

Smart-AVI will not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material.

No part of this document may be photocopied, reproduced or translated into another language with out prior written consent from Smart-AVI.

For the complete manual, visit www.smartavi.com.

Smart-AVI

2840 N. Naomi Ave.
Burbank, California 91504
Phone: (818) 565-0011
Facsimile: (818) 565-0020

Smart-AVI

Smart Audio Video Integration

User Manual

XT-800



Use CAT5 cable to broadcast high resolution SXGA, Stereo Audio, RS232 and IR to 8 stations up to 1000ft away.

www.smartavi.com

Introduction

The XT800 range of products allows the extension of a wide range of video and audio formats, RS232, and IR up to 8 locations using Category 5 Unshielded Twisted Pair (UTP) cables.

With RS232 communication support, the XT800 allows users to send commands to single or multiple devices. This allows the user to change volume, channel or turn on/off the remote LCD TV.

Features

- Supports Dual Screens.
- Uses easy to install, inexpensive CAT-5/5e/6/7/8.
- Output reaches up to 1,000 feet (300 m).
- Resolutions up to 1900x1200.
- HDTV Compatible (720p, 1080i, 1080p)
- 300 MHz Bandwidth.
- Sends high-resolution UXGA, Stereo Audio signals, RS232 or IR from one source to 8 locations.
- Compatible with VGA, XGA, Sun, MAC and SGI Sync Format / Polarity Preservation.
- Compatible with Line Level Stereo Audio Signals.
- High ground loop immunity.
- Built-in power surge and transient protection.
- Designated trimmer in the remote unit to compensate for cable length.
- Compact Metal Case Enclosure.
- External power supply.
- RS-232c communication support to single or multiple displays.
- IR command to single or multiple displays.


What's in the box?

XT800

Please check package contents before installing.

XT800 Package Content		
Qty	Items	Part No.
1	XT800 Transmitter unit	XT800-TX
1	5 volt dc power supply	PS-5D1A-US
1	HDD 15 male to male VGA cable (6ft)	CC-VGAMM-06
Optional		
1	XTPRO Receiver Unit	XTPRO-RX
1	Audio 3.5 mm stereo miniplug cable	CC-MMAMM-06
1	IR EYE Receiver	SM-EYE
1	IR Emitter	SM-LED
1	6' RS232 cable	CCRS232-06

Installation Diagram

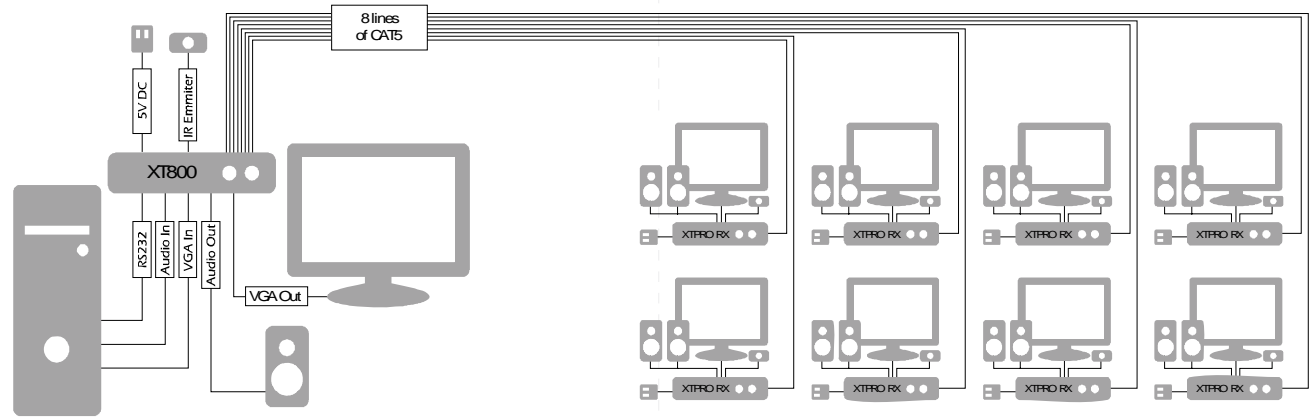

XT800 Transmitter Installation Diagram

XT800 Receiver Installation Diagram

Connecting The Transmitter

1. Connect the output of the computer video card to the video input of the transmitter using the included male to male video cable.
2. Connect the output of the computer audio card to the audio input of the transmitter using 3.5mm audio male to male audio cable.
3. Connect local monitor to the VGA out of the transmitter.
4. Connect external speakers to the transmitter's audio out (Standard 3.5mm stereo miniplug).
5. In the back of the unit connect the CAT5 cable that will connect to the receiver (XT800-RX).


***NOTE: You can not use RS232 and IR at the same time.**

Connecting The Receiver

1. Connect CAT5 cable (coming from the transmitter) to the back of the receiver.
2. Connect 1-4 display monitors to the VGA out connectors on the front of the receiver.
3. Connect 1-4 sets of external speakers to the audio output connections on the front of the unit. (Standard 3.5mm stereo Miniplug)

Adjusting and Tuning the Signal

In order to fine tune the signal, adjust the individual dials one at a time starting with GREEN, then BLUE, and lastly RED. As you turn the dials you will notice the colors slightly change as you increase or decrease the strength. All dials should be around the same distance.

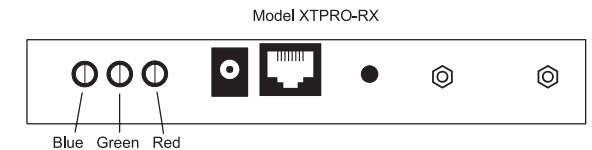

Preparing & Connecting System CAT5 Cable

Following is the wiring standard for terminating CAT 5 cable using RJ-45 connector:

- | | |
|--------|------------|
| Pair 1 | Pins 1 & 2 |
| Pair 2 | Pins 3 & 6 |
| Pair 3 | Pins 4 & 5 |
| Pair 4 | Pins 7 & 8 |



Connectors:
Capacitance:
Conductor Gauge:
Impedance:

RJ-45
 14 pf/ft (46.2 pf/m)
 24 AWG
 100 +/- 15 ohms
 4 - Pair